

## Premium Lift Systems

## **OPERATION AND PARTS MANUAL**



MODEL NUMBER :

M480 Lifter Assembly

PART NUMBER :

1999-0480

SERIAL NUMBER :



Environmental Solutions Group 201 W. Main Street, Ste 300 Chattanooga, TN 37408 Bayne Customer Care: 800.535.2671

## **Cart Lifter General Operation Guidelines**

Always adhere to your company's safety guidelines when using this lifter. This includes wearing appropriate clothing and personal protective equipment, including reflective gear. Keep in mind that you are operating the lifter on public roads or alleys with moving traffic. Stay vigilant and watch out for vehicles and pedestrians.

The lifter should only be used for lifting ANSI-approved carts that are in good condition. It is not designed to be used as a step, to assist in lifting commercial containers, or to crush or break down items. Use with non-approved carts or misuse can result in serious injury or damage and will void the warranty.

Make sure the area around the lifter is free of personnel before operation. Always maintain a safe distance from the lifter to avoid pinch points that can cause serious injury.

Cart lifters can hang very low to the ground at certain points in the lift cycle. It is the operator's responsibility to move the lifter to a safe position, such as raising the lifter fully or placing the lifter in the storage position before driving. Lifters left hanging low risk bottoming out on the street, road, or alley. This can cause serious damage. Damages from bottoming out are not covered by the warranty.

It is the operator's responsibility to position the cart lifter safely before approaching any obstacles. Damages from collisions are not covered by the warranty.

## TABLE OF CONTENTS

		Page
I.	THINLINE <sup>®</sup> Safety	3
II.	THINLINE <sup>®</sup> Specifications	4
III.	THINLINE <sup>®</sup> Installation Instructions	5
IV.	THINLINE <sup>®</sup> Operation Instructions	6
V.	THINLINE <sup>®</sup> Maintenance Instructions	9
VI.	Trouble-shooting Chart	10
VII.	Appendix A	
	1. Unit Assembly Drawing	13
	2. Mounting Height Drawing	
	3. Optional Chute Assembly	15
	4. Optional Mounting Plate Kit	16
	5. Optional Flow Control Kit	17

## SAFETY (WI-0070-A) Bayne *THINLINE* <sup>®</sup> Premium Lift Systems

To prevent serious injury, death or equipment damage, read and understand this entire manual before installing, operating, repairing or adjusting your Bayne THINLINE <sup>®</sup> Premium Lift System. Those using and maintaining this equipment must be thoroughly trained and familiar with the product.

### I. Manual:

This manual must be kept in a location that is readily available for those who operate or maintain this equipment. Additional copies may be obtained from your local dealer or directly from Bayne THINLINE <sup>®</sup> Premium Lift Systems.

### II. Lockout/Tagout Procedures:

All applicable OSHA lockout/tagout regulations must be followed when working on this equipment. Failure to comply with these procedures can result in serious injury or death.

#### **III.** Safety Decals:

Safety decals attached to your Bayne THINLINE <sup>®</sup> Premium Lift System warn of hazards related to the use of this equipment. Operators must read and follow all safety instructions while using this equipment. If the safety decals are not clearly readable, new decals may be obtained from your local dealer or directly from Bayne THINLINE <sup>®</sup> Premium Lift Systems.

## SPECIFICATIONS (WI-0501-A) Bayne *THINLINE*<sup>®</sup> Premium Lift Systems

- A. Double acting cylinder.
  - Replaceable seals.
  - Double action provides smooth operation throughout the dump cycle.
- B. Main pivot points are supplied with grease fittings for extended life.
- **C.** The lift unit measures only 12-1/8" thick in the down position.
- **D.** The faceplate is normally at 45 degrees in the dump position in order to completely eject all materials into the hopper.
- E. The lift unit operates at a cycle time of 15 seconds for safe, fast, efficient service.

# *Note* : Cycle time is controlled by flowrate, as flowrate increases, cycle time decreases. In order to avoid injury and maintain manufacturer's warranty never operate outside the cycle time listed above

- F. Recommended flow rate is 2.5 GPM.
- **G.** Hydraulic pressure requirements are as follows:
  - **1500 PSI** normal working pressure
  - 2500 PSI maximum pressure
- **H.** Lift unit can be a bolt on type installation for easy, quick maintenance and less downtime.
- I. All parts are manufactured and kept in stock at Bayne Machine Works, Inc. for fast response to customer requests.
- **J.** One (1) year limited warranty from date of delivery on all units and models when properly maintained and operated within the recommended cycle time.

## All lift units and parts are inspected by our Quality Control Department before shipment to insure that you always receive the highest quality available in the lift business. For more information, please contact us at (800) 535-2671 or by fax at (864) 458-7519.

## INSTALLATION INSTRUCTIONS (WI-0251-A) Bayne *THINLINE*<sup>®</sup> Premium Lift Systems

The following information is intended to be a <u>GENERAL GUIDE</u> to installing the **Bayne** *THINLINE*<sup>®</sup> lifter on a typical refuse truck. Before starting the installation, read these instructions completely. <u>ALWAYS</u> use the proper tools, lift devices, and personal protective equipment to prevent injury while performing the installation.

**<u>NOTE</u>**: If a **Bayne** *THINLINE*<sup>®</sup> Tap-In Kit was also acquired for this installation, refer to the installation instructions included in the Tap-In Kit manual for hydraulic information.

### IV. Mounting lifter on the compactor :

- 1. The compactor should be emptied and cleaned before any installation. The compactor should be placed on a level solid surface, a concrete pad if possible.
- 2. All wiring, hydraulic lines, steps, etc. that will interfere with the installation should be removed and/or relocated.
- 3. Position the lifter on the side of the compactor per *figure I-1* and mounting height drawing (*Appendix A*) and weld in place. If installing with the use of a mounting plate kit for bolt-on applications, weld the mounting plate in place and attach the lifter using the studs, washers, and nuts supplied.

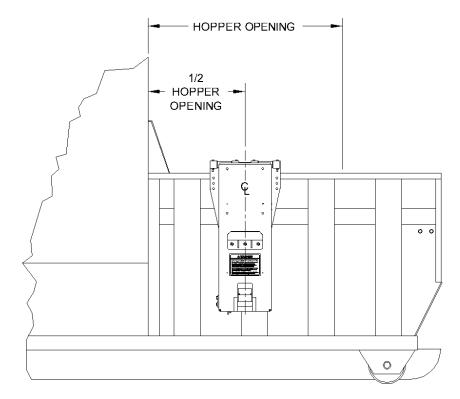


figure I-1

<b>Document Number:</b> 1999-0480 <b>Issue Date:</b> 01/24/14	Revision No: 004	Page: 5 of 17
---	------------------	---------------

## OPERATION INSTRUCTIONS (WI-0138-C) Bayne *THINLINE*<sup>®</sup> Premium Lift Systems

The Bayne *THINLINE*<sup>®</sup> Premium Lift System is a high quality durable dumper built to meet industry requirements. To insure the safety of all operators of this equipment, please read this manual carefully before operating the dumper. *FAILURE TO COMPLY WITH INSTRUCTIONS COULD RESULT IN PERSONAL INJURY AND/OR PROPERTY DAMAGE.* 

The operating stages (figure O-1) in the cycle of the dumper are as follows:

- 1) *START* The container to be dumped is placed on the lift saddle.
- 2) **DUMP** The hydraulic cylinder extends to dump the contents of the container into the hopper. During this cycle, the lower rotating hook automatically "locks" the container to the lifter.
- 3) **RETRACT** The hydraulic cylinder retracts to return the container to the start position. The lower rotating hook automatically retracts to "unlock" the container from the dumper.

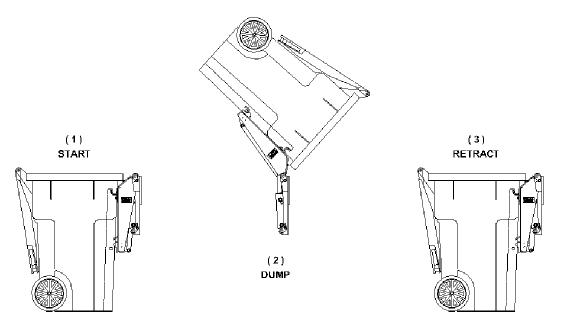


figure O-1

## Warning: Exceeding the recommended cycle time on any dumper will void the manufacturer's warranty

The rotational motions of the dumper are controlled with the use of a hand valve. Moving the handle on the hand valve in one direction will cause the dumper to perform the "dump" stage (figure O-1). Moving the handle in the opposite direction will cause the dumper to perform the retract stage.

<b>Document Number:</b> 1999-0480	<b>Issue Date:</b> 01/24/14	Revision No: 004	Page: 6 of 17
-----------------------------------	-----------------------------	------------------	---------------

### SAFETY ZONES

### **Stand Clear Zone**

To prevent serious injury or death, operators and bystanders should remain outside the Stand Clear Zone (figure O-2) at all times during the operating cycle of the lifter. If at any point during the cycle persons enter this area, the operator most stop all motion of the lifter until the area is cleared.

#### Dump Zone

To prevent serious injury or death, operators and bystanders should remain outside the Dump Zone (figure O-2) at all times. If it becomes necessary to enter this area, all applicable OSHA lockout/tagout regulations must be followed.

### **Operator Area**

To provide a clear, unobstructed view of both the Stand Clear Zone and Dump Zone, operators should remain within the Operator Area (figure O-2) at all times during the operating cycle of the lifter.


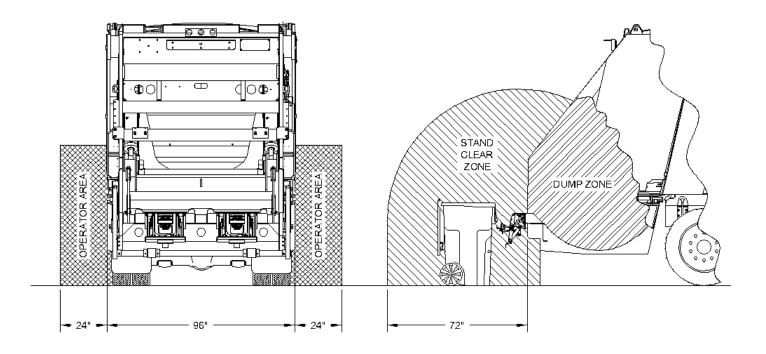


figure O-2

### LOWER HOOK ADJUSTMENT

The lower hook is equipped with two settings that must be properly adjusted to accommodate the carts being lifted. Check the distance (A) (figure O-3) between the upper bar and the lower bar on the cart. If this dimension is between 15 "to 15-1/2", leave the lower hook attachment in the lower setting. If this dimension is between 14-1/2" to 15", move the lower hook attachment to the upper setting.

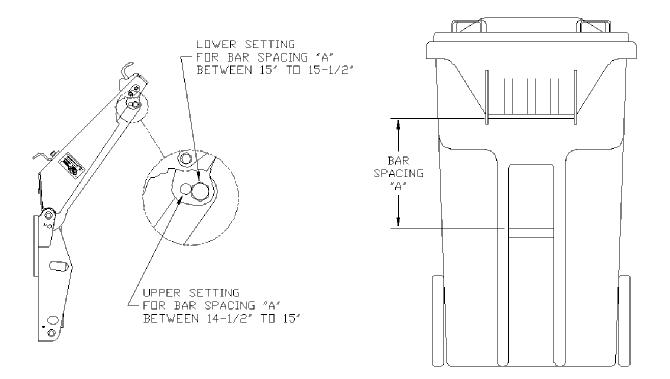

### figure O-3

**CAUTION:** It is the responsibility of the owner / operator of this equipment to adjust these dimensions to be compatible with his specific application. If the bar spacing is not within either of the specified ranges, please contact us on available options for non-standard carts.

### MAINTENANCE INSTRUCTIONS (WI-0141-A) *Bayne THINLINE*<sup>®</sup> Premium Lift Systems

## NOTE:

The most common cause of hydraulic component failure is contamination of the hydraulic fluid ( water, chips, dirt, etc. ) The Bayne *THINLINE*<sup>®</sup> Lift System comes clean from the factory. If removed, be sure the hoses, cylinder and fittings are clean before re-installing them on the unit.

Inspect your dumper on a weekly basis for loose bolts, fittings, oil leaks, etc. Tighten loose hardware as necessary and replace necessary seals to repair oil leaks.

### TROUBLE-SHOOTING CHART (WI-0329-A)


SYMPTOM	POSSIBLE CAUSES	CORRECTIVE ACTION
Lifter operation very erratic.	1. Air trapped in system.	<ol> <li>Bleed all air from lifter hydraulic system.</li> </ol>
	2. Low oil level.	2. Add oil to system.
	3. Flow control valves not set properly.	3. Adjust flow control valves attached to lift cylinder.
Cart lifter will not pick up carts.	1. Cart overweight.	1. Reduce loaded weight of cart.
	2. Hydraulic pressure too low.	2. Check and adjust pressure relief settings.
	3. Faulty hand valve.	3. Replace hand valve.
Lifter operates extremely slow.	1. Faulty hand valve.	1. Replace hand valve.
	2. Faulty hydraulic pump.	2. Consult compactor maintenance manual.
	3. Flow control valves not set properly.	3. Adjust flow control valves attached to lift cylinder.
Lifter operates under recommended cycle time.	<ol> <li>Flow control valves not set properly.</li> </ol>	<ol> <li>Adjust flow control valves attached to lift cylinder.</li> </ol>


### TROUBLE-SHOOTING CHART (WI-0329-A)


SYMPTOM	POSSIBLE CAUSES	<b>CORRECTIVE ACTION</b>
Cylinder leaking oil around rod.	1. Worn cylinder rod seals.	1. Install cylinder seal kit.
Lower hook frequently breaking or bending.	<ol> <li>Lower hook not adjusted properly.</li> </ol>	<ol> <li>Adjust lower hook per Operation Instructions of this manual.</li> </ol>
	2. Bars on carts are not standard spread dimensions.	2. Replace cart or install new bars.
Lifter looses cart when dumping.	<ol> <li>Lower hook not adjusted properly.</li> </ol>	<ol> <li>Adjust lower hook per Operation Instructions of this manual.</li> </ol>
	2. Bars on carts are not standard spread dimensions.	2. Replace cart or install new bars.
	3. Lift bars on cart are bent or spread apart.	3. Replace cart or install new bars.
Lift bars on cart are being spread apart or damaged.	<ol> <li>Lower hook not adjusted properly.</li> </ol>	<ol> <li>Adjust lower hook per Operation Instructions of this manual.</li> </ol>
	2. Bars on carts are not standard spread dimensions.	2. Replace cart or install new bars.

## APPENDIX A


Assembly drawings and part numbers

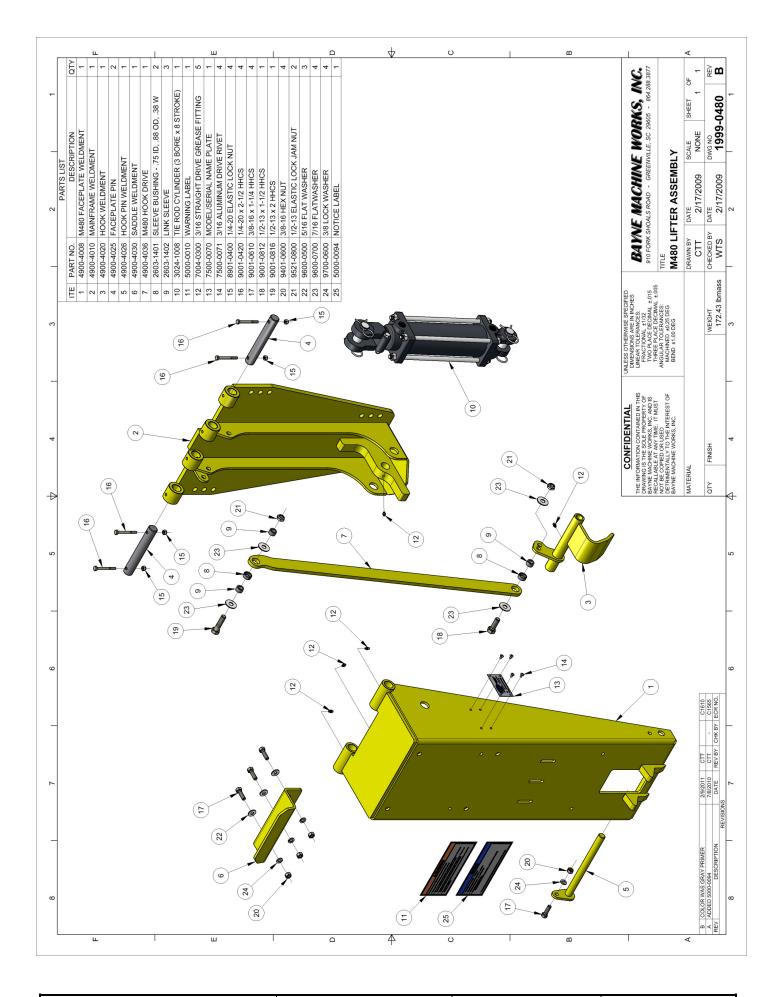


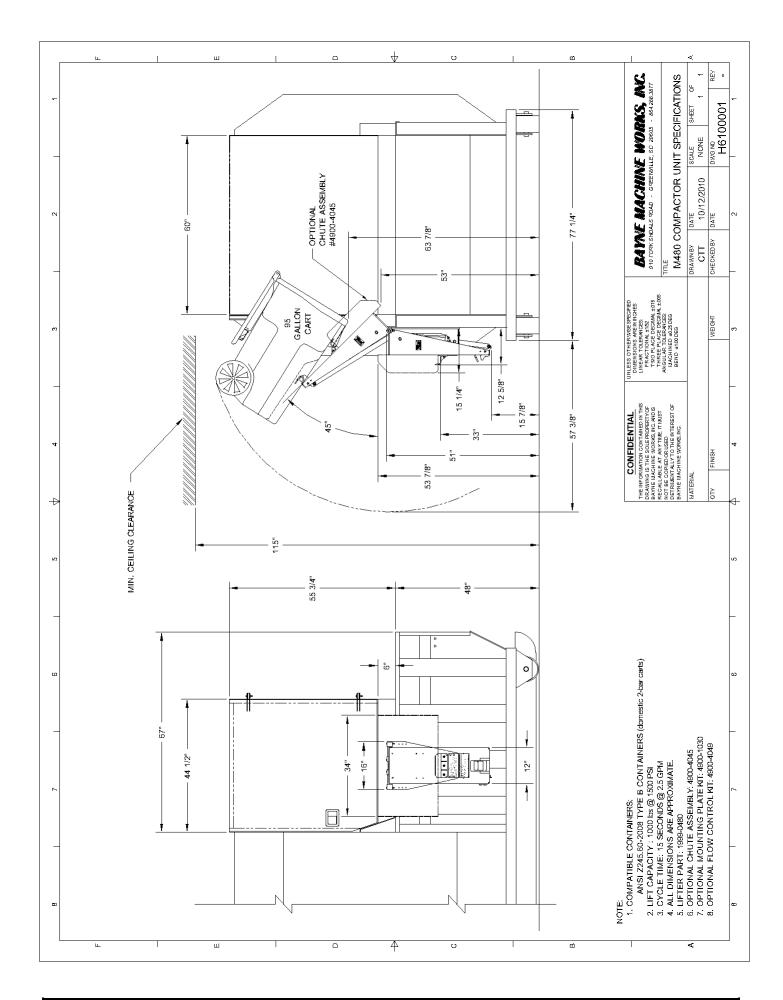

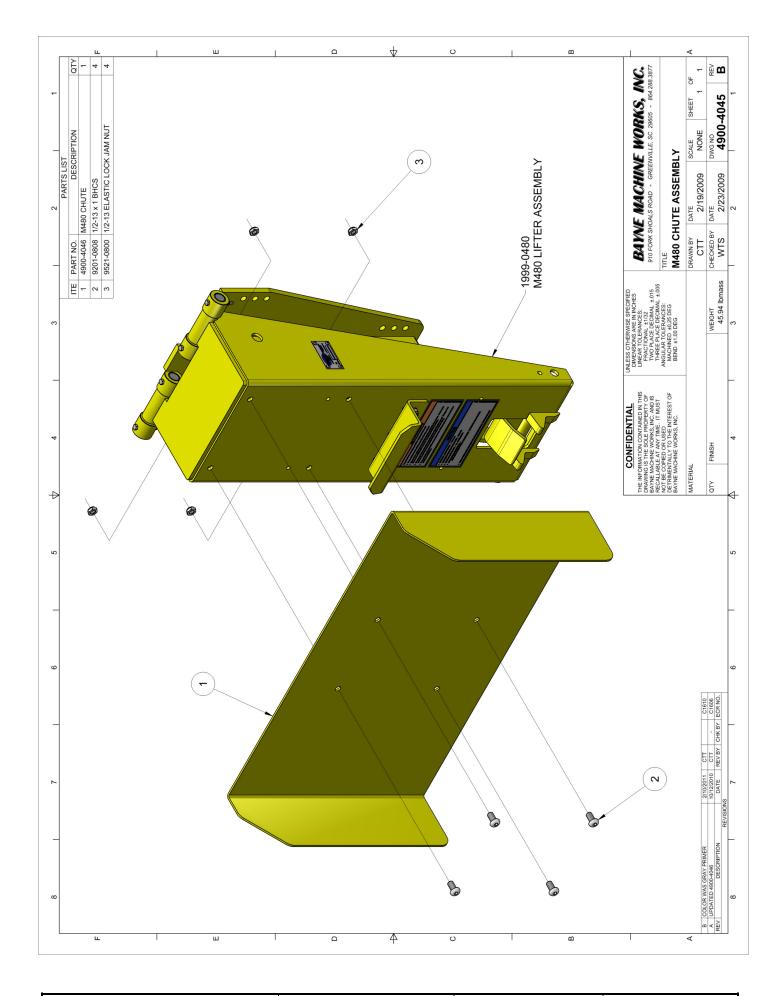

**Document Number:** 1999-0480 **Issue Date:** 01/24/14 **Revision No:** 004 **Page:** 15 of 17

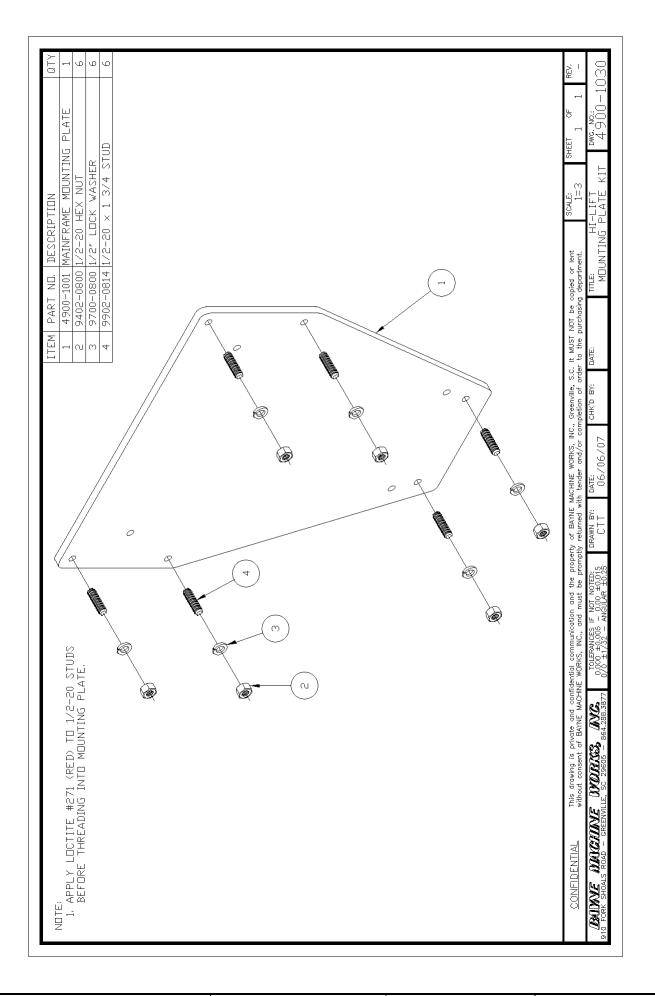

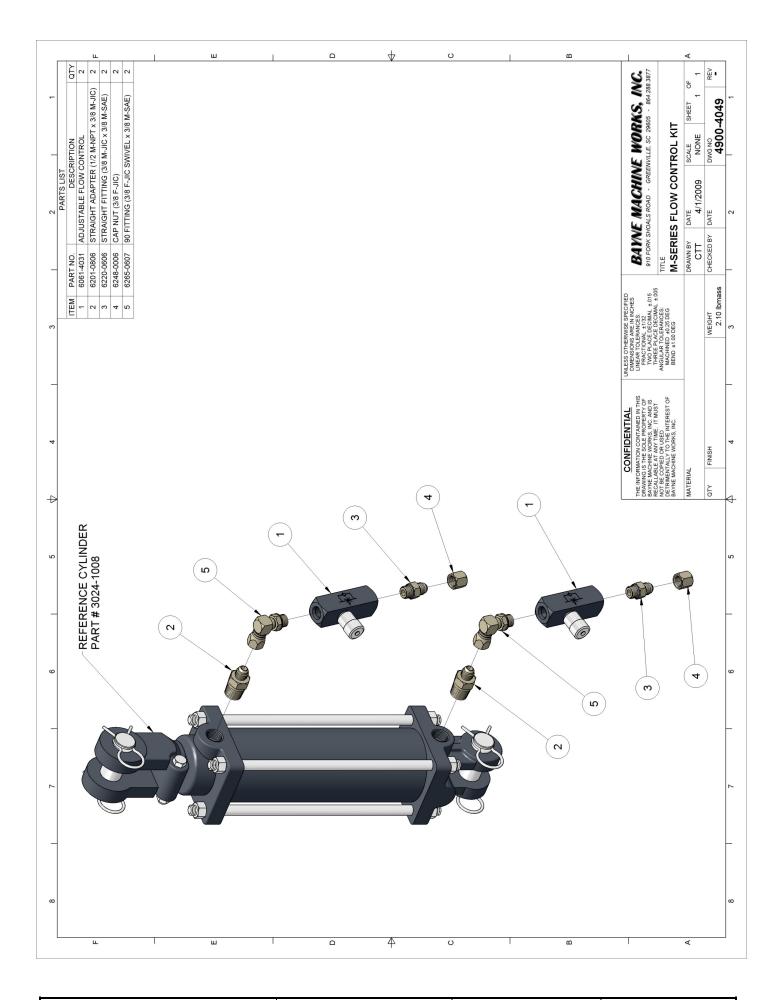



www.baynethinline.com

Customer Care: 800.535.2671

Fax: 256.585.6762

The Heil Co. 4301 Gault Avenue North Fort Payne, AL 35967